

Time is money

HAZARD AREA MICROBIAL AIR MONITORING

from 0 to 1 cubic meter


*in 5 minutes 20 seconds
(180 L/min)*

*in 10 minutes 00 seconds
(100 L/min)*



“SAS ISOLATOR” AIR SAMPLER

To be used with Contact Plate or Petri Dish

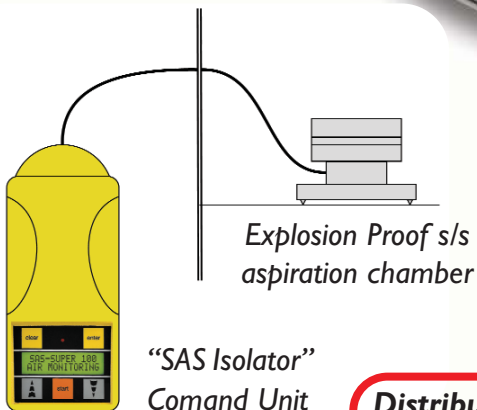

Distributed by: